



MANUAL HIGH-CURRENT COUPLING/DECOUPLING NETWORK CDN 3083-S200M

USER MANUAL 691-379B

MANUAL HIGH-CURRENT COUPLING/DECOUPLING NETWORK CDN 3083-S200M

USER MANUAL

CONTENTS

1	Explanation of the symbols used in this manual	5
2.	Safety advice	7
2.1	Safety measures	8
2.2	Installation	8
2.3	Installation of an equipment under test power switch	10
2.3.1	Applicable safety standards	10
2.3.2	Leakage current	11
3.	Applications	12
4	Assembling of test rig and the CDN sub-units	15
4.1	Installation of a test rig	16
4.2	Preparation of the CDN 3083-S200M	17
4.2.1	Mounting of the common earth bars	17
4.2.2	Mounting positioning plates	18
4.2.3	Assembly for IEC coupling	20
4.2.4	Assembly for extended IEC coupling	21
4.3	EUT connections	22
4.3.1	EUT power feed	22
4.4	Test conditions	23
5	Coupling modes overview	24
5.1	Phase synchronisation	24
5.2	IEC coupling modes	25
5.3	Extended IEC coupling mode	28
6	Effects on the EUT	30
7	Maintenance	31
8	Technical specifications CDN 3083-S200M	32
9	Warranty	35
10	Addresses	36

1 EXPLANATION OF THE SYMBOLS USED IN THIS MANUAL



Please take note of the following explanations of the symbols used in order to achieve the optimum benefit from this manual and to ensure safety during operation of the equipment.

The following symbol draws your attention to a circumstance where non-observation of the warning could lead to inconvenience or impairment in the performance.

Example:



This connection must not be confused with the EUT power input.

The following symbol draws your attention to a circumstance where non-observation of the warning could lead to component damage or danger to the operating personnel.

Example:



Never connect or disconnect the EUT while the test system is performing a test.

Never connect or disconnect the coupling path while the test system is performing a test.

2 SAFETY ADVICE



Improper or careless handling can be fatal! The instrument must only be used by trained personnel.

These operating instructions form an integral part of the equipment and must be studied carefully before putting the device into use. It needs to be available to the operating personnel at all times. All the safety instructions and advice notes are to be observed.

Keeping responsibility to the instructions and recommendations that follow is imperative.

The safety advice referring to the generators also applies and must be followed when using the instruments together with the CDN 3083-S200M.

Neither Teseq AG, Switzerland nor any of the associated sales organizations accept any responsibility for personal injury or for material or consequential damage that may results through irresponsible or negligent operation of this equipment.



When used with a generator NSG 3040 or Modula the EUT input voltage is limited to max. 440 Vrms line to line and 400 Vrms line to ground. If this level is exceeded the generator might be damaged.



When used with generator NSG 3060 and for EUT voltage > 440 Vrms do not set pulse repetition rate <20 seconds. The NSG 3060 may be damaged if this is not respected.



Lethal danger from high voltages and the risk of radiating illegal electromagnetic interference.

The CDN 3083-S200M may only be installed and used by authorised and trained EMC specialists (electrical engineers).

The CDN 3083-S200M must only be used for EMC tests as set down in these operating instructions.



Personnel fitted with a heart pacemaker must not operate the instrument and must not be in the vicinity of the test rig while it is in operation.

Lethal danger from high voltages and the risk of high levels of electromagnetic radiation being generated.

When the system is used in conjunction with options, accessories or other equipment the safety instructions concerning those devices must also be observed.

2.1. Safety measures

Persons fitted with a heart pacemaker must not operate the instrument and should not be in the vicinity of the test rig when pulses are generated.

The test rig must provide adequate insulation protection for up to 5 kV surge. Particular care should be given to the connections between the CDN 3083-S200M and the equipment under test (EUT).

The EUT may only be tested when placed inside a suitable protective enclosure which should provide protection against flying fragments, fire and electric shock.

The pulse voltage must not be able to find its way to unearthed metal objects in the event of the EUT failing.

Only use the instrument in a dry room.

Never leave the instrument unattended when the EUT is switched on.

Regularly check the heat of the CDN using the built in thermometer and switch EUT off if the temperature exceeds 70°C.

Do not open the instrument. Repairs and adjustments must only be carried out by qualified maintenance personnel.

Do not continue to use the CDN in case of any mechanical damage occur. The CDNs housing and the cables have both insulating and screening function, which can only be assured while the housing is intact. Return the damaged CDN to a Teseq service centre immediately for repair.

2.2 Installation

The test system conforms to protection class 1. Local installation regulations must be respected to ensure the safe flow of leakage currents.



Operation without a protective earth connection is forbidden! Therefore it is imperative to screw both earth copper rails to the CDN.



Switch off EUT power before accessing EUT power «in» or «out» terminals. Use the insulated allen key always when working on the terminals.



It is recommended to connect the CDN 3083-S200M through a properly rated power switch device, which should be located close to the test setup. In order to ensure an easy and quick access to the EUT power, same should be clearly and visibly labelled as a device for «EUT power on/off» switching.

The inhouse power distribution needs to be equipped with a proper circuit breaker and an emergency off button as per IEC 61010-1:2010.

Two independent protective earth connections are necessary (for the test system and the EUT). These must be connected back to the local permanent installation or to a fixed, permanent protective earth conductor.

Operate the equipment only in dry surroundings. Any condensation that occurs must be allowed to evaporate before putting the equipment into operation. Do not exceed the permissible ambient temperature or humidity levels. Use only officially approved connectors and accessory items.

2.3 Installation of an equipment under test power switch

It is recommended to connect the CDN through a properly rated power switch device, which should be located close to the test setup. In order to ensure an easy and quick access to the equipment under test (EUT) power, same should be clearly and visibly labelled as a device for «EUT power on/off» switching.

The in-house power distribution needs to be equipped with a proper circuit breaker and an emergency off button as per IEC/EN 61010-1:2010.



The test setup should only be accessible to trained personal.

Dimensioning of mains supply and rating of fuse protection of AC or DC power supply must conform with national prescriptions and EUT requirements.

Inappropriate arrangement, mounting, cabling or handling of the device under test or the protective elements can make the protective features that are incorporated in the concept of the instrument worthless.

2.3.1 Applicable safety standards

Development and manufacture is in compliance with ISO 9001.

The instrument complies with the safety requirements of IEC/EN 61010-1 (safety requirements of electrical equipment for measurement, control and laboratory use).

The interference immunity has been tested in accordance with EN 61326-1.

It is the user's responsibility to ensure that the test rig does not emit excessive electromagnetic interference (EMI) that might affect other items. The test system itself does not produce any excessive radiation; however, the injection of interference pulses into the EUT can result in the device and/or its associated cables starting to radiate EMI. To avoid radiating unwanted interference into the environment, the standards organisations recommend that the test rig be operated in a Faraday cage.

2.3.2 Leakage current

CDN 3083-S200M generates high leakage currents to ground, by specification. Therefore the EUT power supply connection needs to be free of differential circuit breaker protection.

Local installation regulations must be respected to ensure the safe flow of leakage currents.

Always first connect the PE wire to CDN 3083-S200M.

Use only nationally approved connectors and accessory items.

Ensure that a reliable return path for the interference current is provided between the EUT and the coupling/decoupling network.

3 APPLICATIONS



The manual coupling network CDN 3083-S200M fulfills the requirements called for in the surge standard IEC/EN 61000-4-5, including the new features concerning high currents.

The form factor perfectly suits the demands placed on the instrument in its working environment. In its basic form, the coupler is made for use on a floor or for table top placement in an EMC laboratory or in a development workshop. It can be even mounted onto the wall to have free space on the test bench.

High-current couplers may need to be taken to test sites where it is commonly impossible to move large installations in. For convenience, the CDN 3083-S200M can be disassembled in handy parts and can be easily moved to other places.

Injecting surge pulses into power connections always involves a careful weighing up of partially conflicting requirements. On the one hand the power network has to be protected from the interference signals while the effects of the pulses are concentrated on the equipment under test, yet on the other hand the back filter must not result in any significant voltage drop.

In order to keep voltage losses within reasonable limits at increasing current levels, there are five different classes of filter inductances defined in IEC 61000-4-5 Ed. 3, up to 16 A, 16 to 32 A, 32 to 63 A, 63 to 125 A and 125 to 200 A including specific tolerances for the pulse duration and the peak voltages for each class. The CDN 3083-S200M conforms to the tolerances of the 125 to 200 A class.

The back filter inductance has been selected to be 0.2 mH.

The nominal maximum current rating of 200 A per phase can, during short test periods, be considerably exceeded. The unit will tolerate the frequently encountered inrush currents without complaint and, in extreme cases it can be overstressed until the internal environment has reached the max. temperature of 70°C.

CDN 3083-S200M is delivered with external fans mounted. Supply cables for the fans are part of the delivery. It is recommended to turn on the fans when the CDN 3083-S200M is used in the upper load range (Example: EUT current >100 A), or when environmental temperature is high (>30° C).

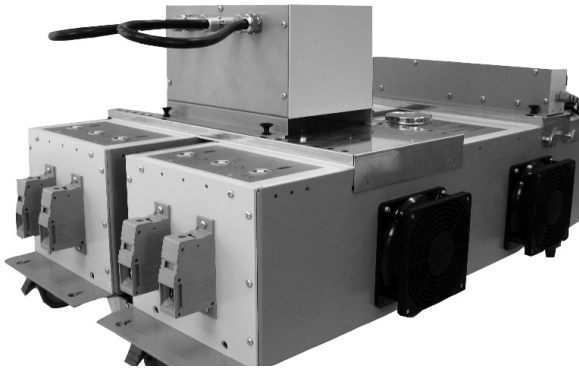


Figure 1

The CDN 3083-S200M is tested for safety in compliance with IEC 61010. The rugged connection terminals together with the solid earth line assure a proper connection, this in combination with a rugged housing.



Figure 2: EUT power supply connector

The coupling network CDN 3083-S200M serves to inject the following standardized surge pulses from the surge generator into the mains supply to the device under test:

- Voltage surge of up to 6 kV which follows the 1.2/50 μ s curve (open-circuit)
- Current surge of up to 3 kA which follows the 8/20 μ s curve (short circuit conditions)

The CDN 3083-S200M is designed to be used with an EUT supply of up to 620 Vrms line to line and 400 Vrms line to ground at 200 A.

Coupling surge pulses with higher voltages (up to 8 kV) is in principle possible, but in case the EUT draws low currents the backfilter chokes may go in saturation due to the higher surge kickback currents and provide no more a good backfiltering performance.

Operation is manual, simple and designed to be safe.

Manual high-current coupling network CDN 3083-S200M

4 ASSEMBLING OF TEST RIG AND THE CDN SUB-UNITS



The CDN 3083-S200M contains following parts:

- 1 Surge decoupling network CDN 3083-S200 N – L1
- 1 Surge decoupling network CDN 3083-S200 L2 – L3
- 2 Earth rails
- 1 Allen key, isolated
- 1 User manual CDN 3083-S200M
- 2 Coupling configuration sheets
- 1 Traceable calibration certificate
- Screw set
- 8 wheels with brakes

Accessories:

IEC coupling set

- 1 INA 3080 Surge coupling unit

Extended IEC coupling set

- 2 INA 3080 Surge coupling unit
- 1 Connection cable 0.5 m Fischer/Fischer connector

Depending on generator used, the CDN set may include following complementary items for:

NSG 3040/NSG 3060 with CDN 3061

- 1 INA 3084 Synchronisation unit for NSG 3040
- 2 x Cable 1 m, with each a Fischer/Fischer connector

4.1 Installation of a test rig

This section describes the check-up and installation of the CDN 3083-S200M coupling network after delivery and provides a checklist on the functions of the unit after being transported or after significant changes of the test rig were performed.

Installation should only be carried out by qualified personnel.

- a) Check the delivery for completeness.
- b) Check the unit for any signs of transportation damage. Report any damage found to the carrier immediately.
- c) Study the manual.
- d) Set up the surge generator in accordance with the instructions in its manual but do not, however, switch the instrument on.
- e) For convenience, place the coupling network close to the generator.
- f) Connect the protective earth to the terminal. The same protective earth should also be connected to the earth terminal of the generator.
- g) Plug the high voltage connectors into the surge generator.
- h) Connect the INA 3084 synchronisation unit to the generator.
- i) Connect the EUT supply.
- j) Switch on the mains power at the generator.
- k) Choose the appropriate coupling mode.
- l) Connect the device to be tested according to the relevant safety specifications and with due regard to the magnitude of the pulse voltage selected. Take the necessary measures to cope with any possible explosion or out-break of fire.
- m) Switch on the EUT power supply.
- n) Operate the generator as instructed in its manual and carry out the required tests.

It is assumed that the test rig has been set up in accordance with the foregoing notes and that the device to be tested has been connected taking the relevant safety measures into account.



When used with a generator NSG 3040 or Modula the EUT input voltage is limited to max. 440 Vrms line to line and 440 Vrms line to ground. If this level is exceeded the generator will be damaged.

4.2 Preparation of the CDN 3083-S200M

Prepare the test setup according to the chosen standard and put both decoupling network units, etc. to the place where the CDN shall be used for testing.

4.2.1 Mounting of the common earth rails

Place the two surge decoupling networks in parallel to each other. Looking from the top, make sure that the N-L1 network is below the L2-L3 network.



To enable proper synchronisation, assure that side L1 being placed next to L2!

Use the delivered isolated allen key to screw the copper earth rails on to both ends of the decoupling networks (2 x 2 screws each side per network).



Make sure that the copper rail is properly mounted and tightened. Use only the delivered screws.

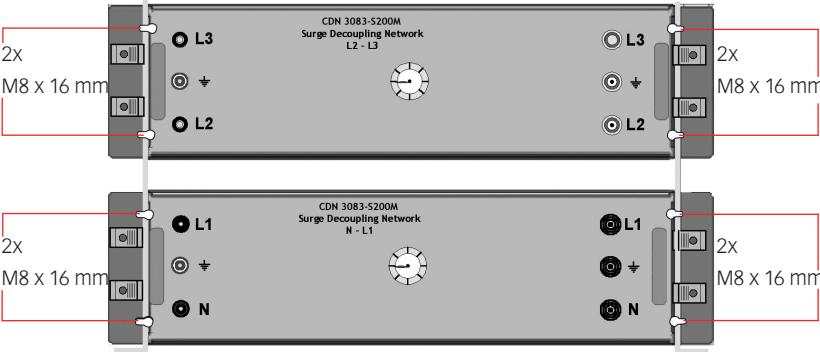


Figure 3: Top view on CDN units

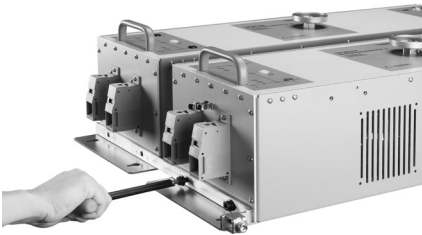


Figure 4: Assembly of copper earth rail

After this preparation work, the CDN is stable enough for being turned to its side prior to mounting the wheels at the bottom of the case, if required.

4.2.2 Mounting positioning plates

Screw the base plates (positioning plates) of the synch unit and of the coupling unit, with the knurled screws to the foreseen holes on the outside of the decoupling networks. Connect the synch lines (safety banana connector) to the decoupling units. If CDN 3083-S200M decoupling networks are not placed correctly, the positioning plates can not be screwed on.

Manual high-current coupling network CDN 3083–S200M

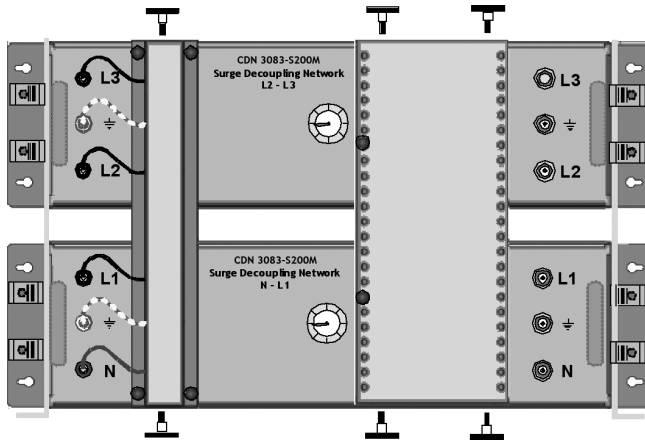


Figure 5: Location of synchronisation unit and of positioning plate



Figure 6: Synchronisation plate (l.h.) and positioning plate (r.h.)

4.2.3 Assembly for IEC coupling

For IEC coupling, add the coupling modules INA 3080 in the middle of the positioning plate and press it slightly down into the positioning holes. Fix the INA by pushing the black quick snap-on knobs down. The CDN 3083-S200M is now ready to use.

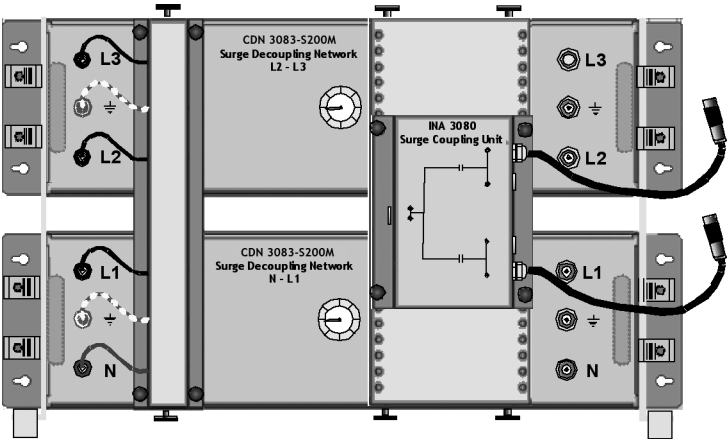


Figure 7: Location of IEC coupling module

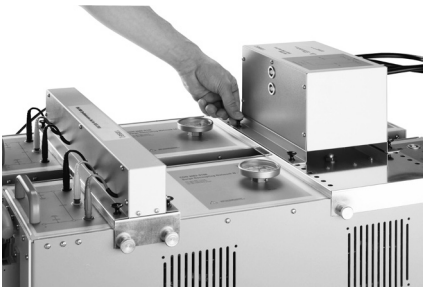


Figure 8: View of IEC coupling module

4.2.4 Assembly for extended IEC coupling

For extended IEC coupling, add both coupling units INA 3080 on the positioning plate and press it slightly down into the positioning holes. Fix the INAs by pushing the black quick snap-on knobs down. The CDN 3083-S200M is now ready to use.

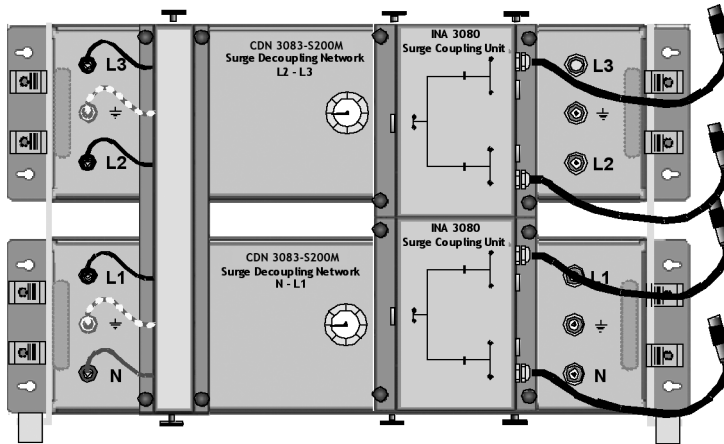


Figure 9: Location of extended IEC coupling modules



Figure 10: View of extended IEC coupling modules



Because of the coupling capacitors, the mains voltage can be present at the HV connectors when the EUT power supply is switched on. The HV connectors must therefore always be hooked up to the generator before the mains and the EUT power supply are switched on.

4.3 EUT connections

The CDN 3083-S200M is equipped with EUT terminals suitable for a max. wire gauge of 110 mm2 AWG 4-4/0 (230 A), torque: max. 20 Nm.



The in-house power distribution needs to be equipped with a proper circuit breaker and an emergency off button as per IEC/EN 61010-1:2010.

4.3.1 EUT power feed

The power is fed in via 5-core cable leads.



Do not mismatch the EUT power input of the CDN and the EUT power output. Use only the delivered isolated allen key to screw the cables to the terminals. Never touch the terminals during the EUT power is on.

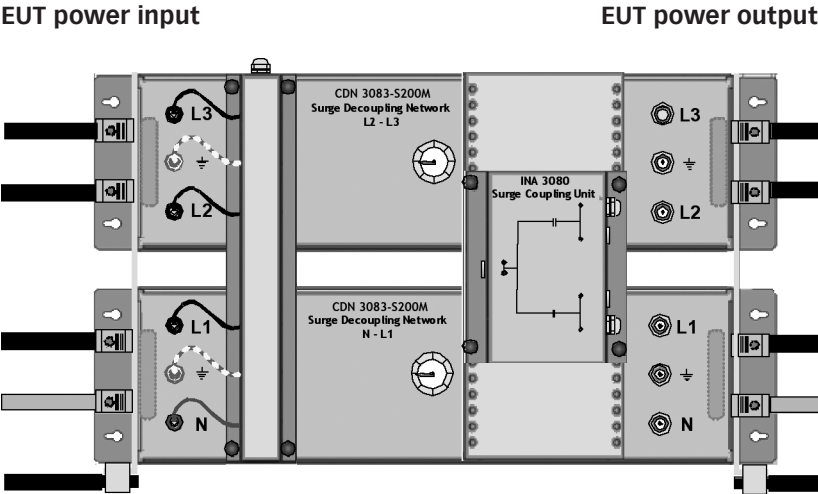


Figure 11: Identification of EUT power input and output

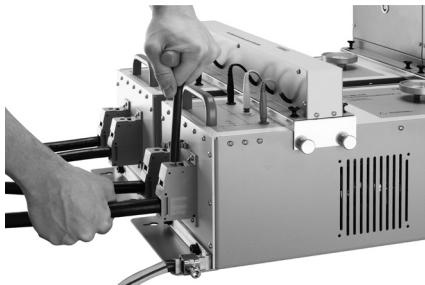


Figure 12: View of EUT power input connection side

4.4 Test conditions

Every test rig must be planned carefully. All the instrumentation should be readily accessible and rigidly positioned.



The whole test assembly should be supplied from the same mains connection in order to prevent uncontrolled flow of pulse current in other parts of the system. Installation in a Faraday cage ensures that non-associated items and equipment are not disrupted by pulses radiated from the cabling or the device under test. Connections to the EUT must be of low impedance and be made with high contact pressure. Otherwise welding or arcing may occur at the contact points.

5 COUPLING MODES OVERVIEW



In the following all possible coupling modes are described.

The following example shows a coupling from L3 to N whereby the generator High output is connected to the INA 3080 surge coupling unit input. One end is looped, in order to get the recommended 18 μ F capacitance required for line to line coupling according to IEC/EN 61000-4-5. The other pulsed end is connected to L3. The generator low output is directly connected to the N line.

5.1 Phase synchronisation

In the INA 3084 synchronisation unit the input voltage L1 to N is wired out for Sync reference. The approximately 2 meter long cable of INA 3084 needs to be connected to the EUT mains input plug located on the rear side of the NSG 3040.

The phase angle indicated on the display of NSG 3040 is always in relation with the L1-N reference. For coupling settings different from L1 to N coupling, it is up to the user to make the phase angle correction, and enter the required phase angle + phase shifting value.

The value of the phase angle shifting in relation with the selected coupling path and is installation and wiring dependent. At first use of the test system it is recommended to make the phase angle setting verification using MD 200 Probe and to edit a phase angle correction table to be used during further operation.

For synchronisation purpose the cable end of the INA 3084 synchronisation unit needs to go to the EUT power input connection of the generator.



**Never run the CDN with a loose end of the coupling unit.
All connectors need to be plugged.**

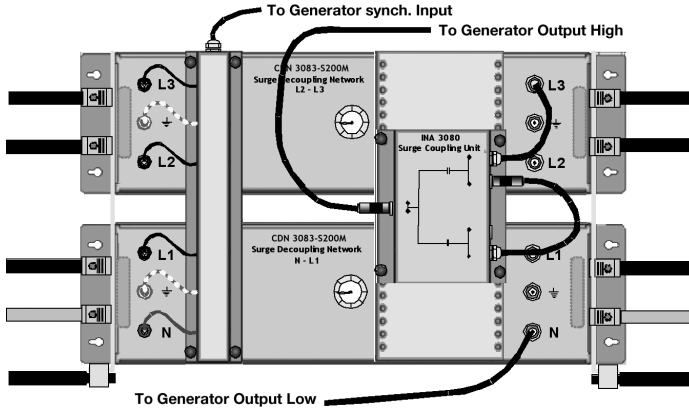


Figure 13: Example of IEC coupling L3- N

Alternative connection possibilities are summarized in table 1 hereafter.

5.2 IEC coupling modes

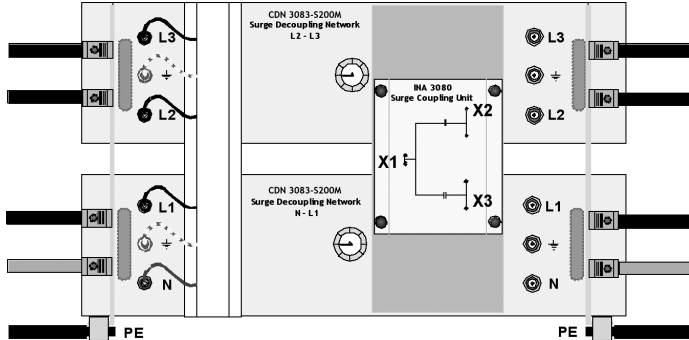


Figure 14: IEC coupling basic configuration

All IEC/EN 61000-4-5 coupling possibilities are listed. For easy understanding, the coupling network INA 3080 input is identified by **X1** while the outputs are marked with **X2** and **X3**. Depending on coupling mode selected following connections are to be established for:

IEC line to line

	Generator output		Loop on INA 3080	Decoupling network CDN 3083-S200		
	High	Low		L1	L2	L3
L1 – N	X1	N	X2 to X3	X3		
L1 – L2	X1	L2	X2 to X3	X3		
L1 – L3	X1	L3	X2 to X3	X3		
L2 – N	X1	N	X3 to X2		X2	
L2 – L1	X1	L1	X3 to X2		X2	
L2 – L3	X1	L3	X3 to X2		X2	
L3 – N	X1	N	X3 to X2			X2
L3 – L1	X1	L1	X3 to X2			X2
L3 – L2	X1	L2	X3 to X2			X2

IEC line to ground

	Generator output		Loop on INA 3080	Decoupling network CDN 3083-S200			
	High	Low		N	L1	L2	L3
N – PE	X1	PE	X2 to X2	X3			
L1 – PE	X1	PE	X2 to X2		X3		
L2 – PE	X1	PE	X3 to X3			X2	
L3 – PE	X1	PE	X3 to X3				X2

Table 1: Selection of IEC coupling modes

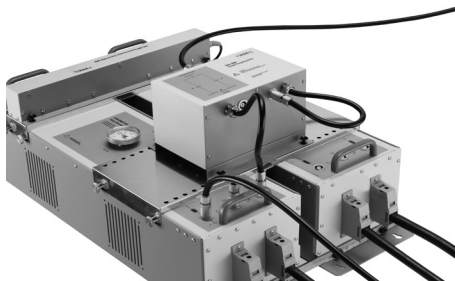


Figure 15: IEC coupling L1-N

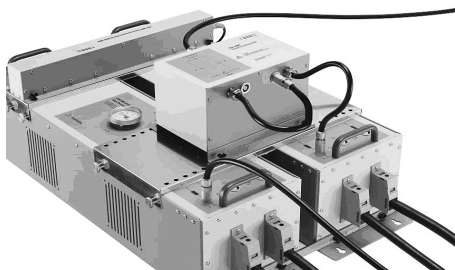


Figure 16: IEC coupling L2-N

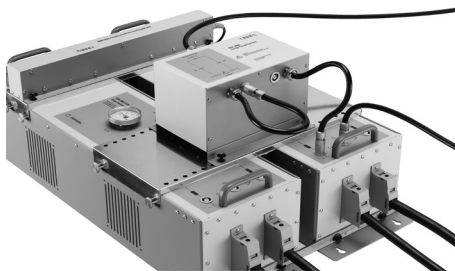


Figure 17: IEC coupling L2-PE

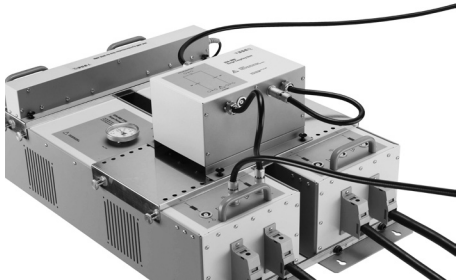


Figure 18: IEC coupling L1-PE

5.3 Extended IEC coupling mode

For extended coupling modes, a second INA 3080 needs to be added on the CDN 3083-S200M.

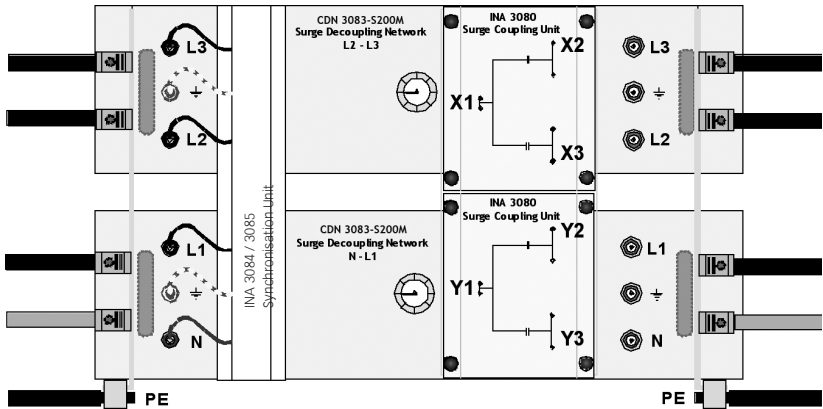


Figure 19: Extended IEC coupling basic configuration

Generator output		Loop on INA 3080	Connection from X1 to Y1	Decoupling network CDN 3083-S200M			
High	Low			N	L1	L2	L3
X1	PE	---	Yes	Y3	Y2	X3	X2
X1	L1	X2 to X3	No			X3	
X1	L2	X2 to X3	No				X2
X1	L3	Y3 to Y2	No		Y2		
X1	PE	Y2 to Y3	No	Y3			
X1	PE	Y3 to Y2	No		Y2		
X1	PE	X2 to X3	No			X3	
X1	PE	X3 to X2	No				X2
X1	N	Y3 to Y3	Yes		Y2	X3	X2
X1	PE	Y3 to Y3	Yes		Y2	X3	X2

Table 2: Selection of extended IEC coupling modes

6 EFFECTS ON THE EUT



The surge pulse contains considerable energy. When super-imposed on the mains, a significant resultant current can occur if the EUT becomes defective. The effects can be very different, depending on the characteristics of the equipment undergoing the test:

- No effect
- Brief faulty operation without permanent damage
- Reduction of the insulation resistance or similar
- Quality affected (life expectancy)
- Change in the technical specification of the device under test
- Flash-over in cables, connectors and equipment
- Bursting of components
- Explosion of components
- Burning of parts caused principally by resultant mains current when mains superposition mode is used
- Damage to equipment, systems or components that are electrically or inductively coupled to the pulse current path



When testing with high energy surge pulses, a test on a device should never be considered as being damage-free until a subsequent thorough investigation proves that the EUT is still fully intact.

7 MAINTENANCE

31



Basically there is no need of maintenance and the CDN 3083-S200M does not contain serviceable parts. The housing may be cleaned with a moist cloth with possibly just a trace of detergent liquid. Industrial spirit is also a suitable cleaning agent. Other solvents are not permitted.

Only specialist or trained maintenance personnel may carry out internal work on the instrument. In the event of more service or repair work being necessary, the instrument should be returned to a Teseq service center accompanied by an appropriate description of the problem. The instrument contains no fuses.

8 TECHNICAL SPECIFICATIONS

CDN 3083–S200M



The CDN 3083-S200M is a 3-phase manual coupling network for surge interference pulses as per IEC/EN 61000-4-5 and other related standards.

The CDN 3083-S200M base set consists of:	1 x Surge decoupling network CDN 3083-S200 – L1 1 x Surge decoupling network CDN 3083-S200 L2 – L3 2 x Earth rails 1 x Wheel set 1 x Allen key, isolated 1 x User manual CDN 3083-S200M 1 x Test certificate 2 x Coupling configuration sheets
Accessories required either:	
IEC coupling set	1 x INA 3080 Surge coupling unit
or	
Extended IEC coupling set:	2 x INA 3080 Surge coupling unit 1 x Connection cable

Following complementary items are required for phase synchronisation:

Modula/NSG 3040/CDN 3061:	1 x INA 3084 synchronisation unit for NSG 3040 and Modula 2 x Cable 1 m, with each a Fischer/Fischer plug
---------------------------	--

Pulse voltages/current:	6.6 kV/3.3 kA max.
EUT power supply voltage:	620 Vrms line-to-line 400 Vrms line-to-ground 500 VDC, max.
Current:	200 Arms or DC max. per line
Frequency:	DC to 60 Hz (400 Hz max. with increased power loss)
Mains decoupling:	0.2 mH $\pm$ 10%
EUT connection:	Screw-terminals, 230 A, up to 110 mm ² (AWG 4-4/0)
Max. temperature:	70°C
Coupling modes:	Surge differential, lines to PE, common to PE (with optional INA 3080 coupling unit for extended IEC coupling)
Dimensions:	850 x 520 x 345 (L x D x H) mm (33.5 x 20.5 x 13.6")
Weight:	80 kg approx.
Optional accessories:	MD 300 Current measuring probe MD 200/200A Voltage measuring probe

IEC coupling modes:

Line to ground (9 μ F)	L1 — PE
	L2 — PE
	L3 — PE
	N — PE
Line to line (18 μ F)	L1 — N
	L1 — L2
	L1 — L3
	L2 — N
	L2 — L3
	L3 — N

Optional IEC coupling modes (possible only with second INA 3080):

Lines to ground (9 μ F)	L1+L2 — PE
	L1+L3 — PE
	L1+N — PE
	L2+L3 — PE
	L2+N — PE
	L3+ N — PE
	L1+L2+L3 — PE
	L1+L2+N — PE
	L1+L3+N — PE
	L2+L3+N — PE
	L1+L2+L3+N — PE

9 WARRANTY

35



Teseq grants a guarantee of 2 years on this instrument, effective from the date of delivery.

During this period, any defective component/part will be repaired or replaced free of charge or, if necessary, the instrument will be replaced by another of equivalent value. The decision regarding the method of reinstating the functional capability is at the sole discretion of Teseq.

Excluded from the guarantee are damages or consequential damages caused through negligent operation or use as well as the replacement of parts subject to degradation.

The guarantee is rendered invalid by any intervention by the customer or a non-authorized third party.

The goods are to be returned in the original packing or other equivalent packing suitable for the purpose of the foreseen means of transport. Teseq shall accept no responsibility for damage in transit.

Headquarters

Teseq AG

4542 Luterbach, Switzerland

T +41 32 681 40 40

F +41 32 681 40 48

sales@teseq.com

www.teseq.com

Manufacturer

Teseq AG

4542 Luterbach, Switzerland

T +41 32 681 40 40

F +41 32 681 40 48

sales@teseq.com

China

Teseq Company Limited

T +86 10 8460 8080

F +86 10 8460 8078

chinasales@teseq.com

France

Teseq Sarl

T +33 1 39 47 42 21

F +33 1 39 47 40 92

francesales@teseq.com

Germany

Teseq GmbH

T +49 30 5659 8835

F +49 30 5659 8834

desales@teseq.com

Japan

Teseq K.K.

T +81 3 5725 9460

F +81 3 5725 9461

japansales@teseq.com

Singapore

Teseq Pte Ltd.

T +65 6846 2488

F +65 6841 4282

singaporesales@teseq.com

Switzerland

Teseq AG

T +41 32 681 40 50

F +41 32 681 40 48

sales@teseq.com

Taiwan

Teseq Ltd.

T +886 2 2917 8080

F +886 2 2917 2626

taiwansales@teseq.com

UK

Teseq Ltd.

T +44 845 074 0660

F +44 845 074 0656

uksales@teseq.com

USA

Teseq Inc.

T +1 732 417 0501

F +1 732 417 0511

Toll free +1 888 417 0501

usasales@teseq.com

To find your local partner within Teseq®'s global network, please go to **www.teseq.com**

© July 2014 Teseq®

Specifications subject to change without notice. Teseq® is an ISO-registered company. Its products are designed and manufactured under the strict quality and environmental requirements of the ISO 9001. This document has been carefully checked. However, Teseq® does not assume any liability for errors or inaccuracies.